

## TROUBLESHOOTING WITH HEATERS

## To Light Pilot

Rotate control knob to "Pilot" position. Firmly depress knob for 30 seconds while depress the red button spark ignition devise on side of heater. Pilot should remain lit. If heater is equipped with lighting pilot hole, light through 1/2inch diameter lighting hole above control. Pilot should remain lit.

Note: allow 5 to 10 minutes to purge air through pilot after turning on propane tank.

To Turn Heater On

Turn control knob to "On" Position.

To Turn Heater and Pilot "Off"

Turn knob to "Pilot" position. Depress slightly and turn to "Off" position. Wait 5 minutes after complete shutoff of heater before relighting pilot. Turn "Off" gas tank when heater is not in use.

Warning: These tanks are equipped with a pressure release valve which allows gas to escape in the event pressure increases due to temperature. (Questions or concerns please contact APEX TENT AND PARTY)

THANK YOU FOR CHOOSING APEX TENT AND PARTY

2765 DOW AVENUE, TUSTIN CA 92780

(714)573-2000